



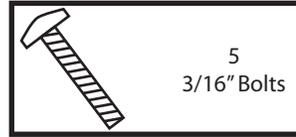

5338DOME - 4438DOME

Egress Well Cover


Installation Instructions

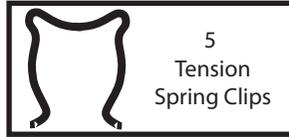

1. Place the Egress Dome over the well. Push it tight against the house. If the cover doesn't fit symmetrically, the steel well may be bent out of shape. Use a sledge hammer to tap the well to allow the cover to fit.


2. Once properly fitted, place the cover back over the egress well. Be sure to center the cover on your well. Using a dry-erase marker, mark the locations where you will attach your clips. The holes should be marked at the center of the rim of your well. (See Figure A)

3. Remove the cover from your well and drill a 3/16" hole at each marked location

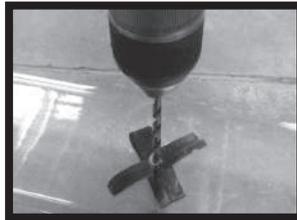


4. Mount the clips to your cover using the cap nut and bolt provided. Tighten the screw until there is about 1/4" of space in the spring clip. (See Figure B) (Warning: Do not over-tighten the spring clip)

5. Snap the cover onto the rim of your well. Adjust the spring clip tension as needed by loosening or tightening the cap nuts so the cover stays securely in place, but remains removable for cleaning and emergency exit.

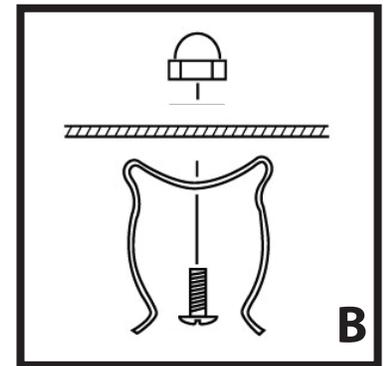

Note: On U-Shaped and other less common egress wells, there may only be enough space to install one tension clip on each side and one in the front center (See figure C).

Note the edges of the cover may overlap a bit more on u-shaped and other wells. This fit is considered acceptable as long as there is a minimum of 2-3 tension clips installed.

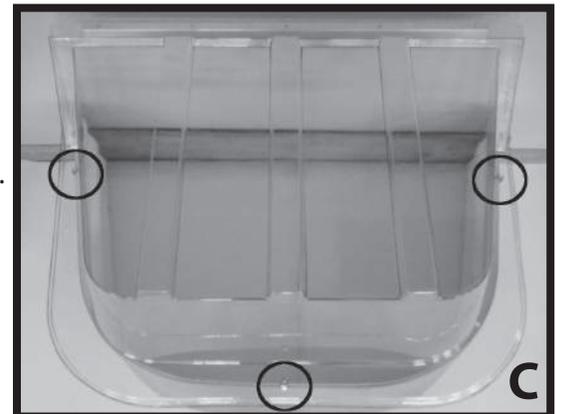


****See Back for Cleaning Information and Warranty****



5338 & 4438 DOME Siding Adapter Kit

The 5° forward slant of the Egress Dome is designed to accommodate insulation & siding that project beyond the foundation, above the top of the window well. In some cases, the Dome will be positioned against a flat surface at a 90° angle. This application will create a gap up to 3" along the top and sides of the Egress Dome.

To enclose this gap, the Dome Adapter Kit may be a desirable solution. The 3-piece clear polycarbonate panels (Fig. 1) easily attach to the Dome to fully enclose any gap surrounding the foundation or siding. (Fig. 2) The panels can be trimmed for a customized fit. Please contact your retailer for pricing and order information, or call Shape Products Customer Service at (715) 232-0495.

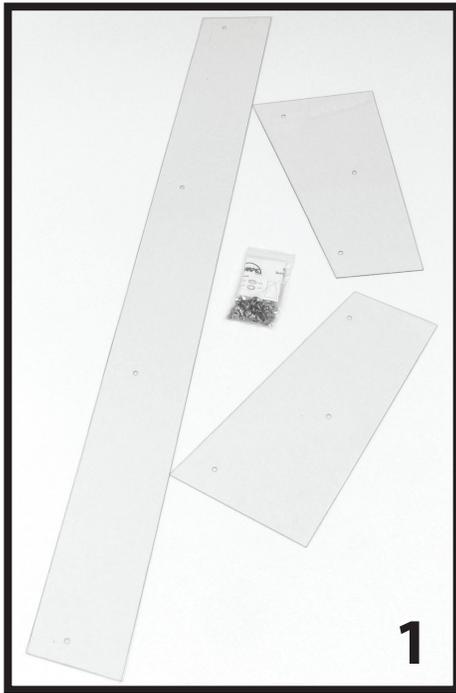

- Clear Polycarbonate Panels for a Finished Look
- Pre-Drilled Panels for Ease of Placement
- Includes Easy to Install Instructions & Hardware
- Trimmable for a Custom Fit Around Siding & Foundation

Cleaning Polycarbonate: Window Well Covers may be cleaned using a mild solution of detergent and water. The use of harsh chemicals or solvents may damage plastic and void warranty.

Shape Products, LLC warrants the 5338DOME Egress Cover for a period of five (5) years from the date of purchase. This warranty only extends to the original purchaser. This warranty does not apply to damage from accident, misuse, normal wear, alteration, improper installation, improper maintenance, or abuse. ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO FIVE (5) YEARS FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Shape Products, LLC. will replace a defective window well cover free of charge, (except for dealer labor and shipping). Contact Shape Products, LLC. at the address listed below (or see your Shape Products, LLC dealer) to obtain service under this warranty. Proof of purchase is required and replacement is the sole remedy of the purchaser under this warranty, and in no event shall Shape Products, LLC be liable for any incidental or consequential damages, losses, or expenses. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply. This warranty gives specific rights and you may also have other rights that vary from state to state.