
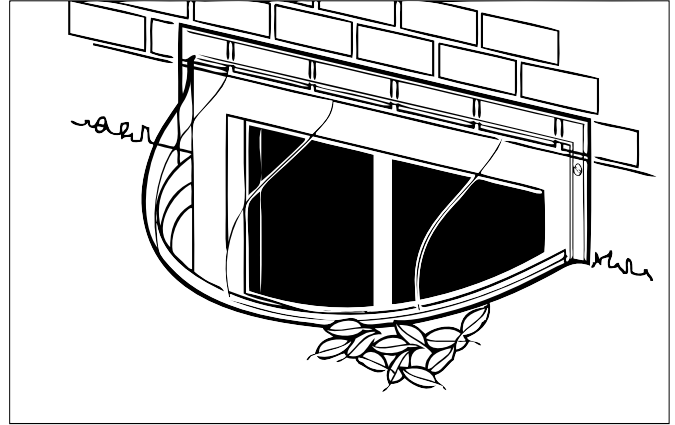


Bubble Cover Installation Instructions

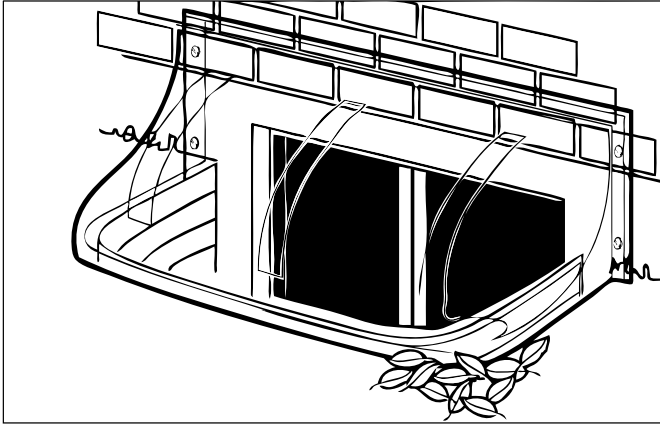

1. Place cover over window well.
2. Drill mounting holes (2) on both sides of window well cover thru plastic and mark anchor hole locations on both sides of the window.
3. Determine length and type of anchor screws required, depending on aluminum, wood and masonry surfaces adjoining the window area.
4. Remove cover and drill anchor holes to proper sizes.
5. Position cover over window aligning holes with the anchors. Secure the cover to the wall using anchor screws. If gaps occur because of siding overlap, they may be filled with caulk. Note: Sufficient ventilations should remain to allow moisture to escape.

Cleaning: Window cover may be cleaned with a mild solution of detergent and water. Use of harsh chemicals and scouring powders should be avoided.

Limited Warranty

Shape Products, LLC. warrants its Invisible Bubble window well covers for a period of one (1) year from the date of purchase. This warranty only extends to the original purchaser. This warranty does not apply to damage from accident, misuse, normal wear, alteration, improper installation, improper maintenance or abuse. ANY IMPLIED WARRANTIES WHICH THE PURCHASER MAY HAVE ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF PURCHASE. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Shape Products, LLC. will replace a defective window well cover free of charge, (except for dealer labor and shipping). Contact Shape Products, LLC. at the address listed below (or see your Shape Products dealer) to obtain service under this warranty. Proof of purchase is required and replacement is the sole remedy of the purchaser under this warranty, and in no event shall Shape Products, LLC. be liable for any incidental or consequential damages, losses or expenses. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply. This warranty gives specific legal rights and you may also have other rights that vary from state to state.



Shape Products, LLC

1821 Indianhead Dr. Menomonie, WI 54751 | (715) 232-0495 Fax (715) 232-0580

www.ShapeProducts.com